



Prelude

Portable Wireless Charger

User Guide

Wireless
Recharging Area

Power
LED Indicator

Battery Status
LED Indicator

USB-C Port

Magnetic Cover

Wireless
Charging Area

Nano-suction
Area

Wireless
Recharging
LED Indicator



Welcome to Prelude

Shake the Prelude 1-2 times and LED indicators will light up. Prelude will be in standby mode for 30 seconds. Prelude is ready to go.




Prelude will automatically turn off if there is no action for 30 seconds. All LED indicators will turn off.

If the battery power lower than 5%, LED indicators will blink. Please charge it fully.

Charging Prelude

Before using Prelude for the first time, charge it fully.
TWO WAYS to charge Prelude:


Charging Prelude by Cable

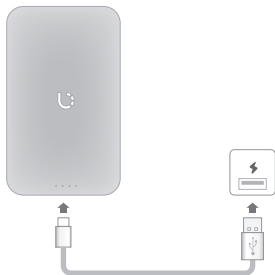

Plug USB-C end of cable into Prelude USB-C port.
Plug USB-A end of cable into power adapter (not included).

Use QC2.0 or higher USB adapter for improved fast recharging experience.

Charging Prelude by Wireless Device

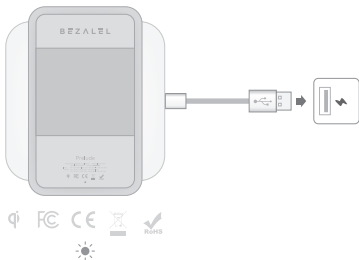


Place wireless recharging area face down (the side with logo) onto a Qi-charging device (not included). Wireless recharging LED Indicator will light up to show Prelude is being recharged wirelessly.

Use fast wireless charging pad (15W) for improved fast recharging experience.

Charging Your Device with Prelude

After the Prelude is fully charged, you can use it to charge your wireless or wired devices.

Remove magnetic cover. Remove film from nano-suction area.

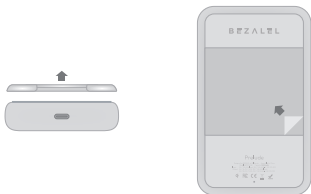

Wireless Charging



1.

Shake the Prelude 1-2 times and LED indicators will light up. Prelude is ready to go.

2.

Gently press Prelude's nano-suction charging area onto the glossy-surface of your phone.

* For nano-suction attachment, the back of your phone or phone case must have a glossy surface.

* Use BEZALEL Magnetic Case to automatically align and for better holding a proper charge.



3.

Wireless charging, on the go.




Wired Charging



1.

Shake the Prelude 1-2 times and LED indicators will light up. Prelude is ready to go.

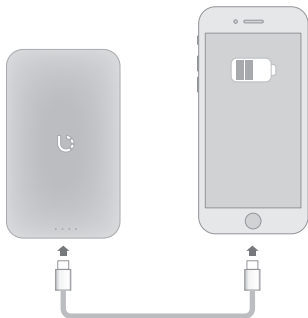

2.

Connect the Prelude to your phone with a USB-C cable (not included).

Store Prelude

Once you finish using the Prelude, you can place the Magnetic Cover above the Nano-suction Area for anti-stick dust.



Cleaning Guide

If your NanoGrip sticky mat becomes dirty or dusty, it will lose some of its stickiness.

Gently rub the nano-suction area with your finger with lukewarm water and air dry. This will make it regain stickiness and can be used over and over again. Do not put Prelude under running water.

Safety & Handling

1. Keep wireless charging unit dry and away from liquids. Do not use on wet surfaces.
2. Do not attempt to disassemble or modify charger.
3. Always disconnect power supply before cleaning charger.
4. Keep away from high heat. Use in the temperature range between 0 and 45 degrees Celsius (32 and 113 degrees Fahrenheit).
5. Phone case cannot have any ring attachment, credit card, metal or magnetic sticker. This may cause overheating and affect the wireless charging process.

Specifications

Battery Capacity	5000 mAh
Wireless Input	12V / 1A
USB-C Input	DC 5V, 9V, 12V ; 18W
Wireless Output	DC 5V / 1A, 9V / 1.2A, 12V / 0.9A
USB-C Output	5V / 2A, 9V / 1.67A, 12V / 1.5A

Package Contents

Prelude Portable Wireless Charger X1
USB-C Cable X1
User Manual X1

