



BEZAL

Omnia

Wireless Car Charger

User Guide



Nano-Suction


Wireless charging area

LED indicator



Vent clamp button


Vent clamp

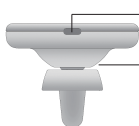


Input port

Ball joint


QUICK START OPERATION

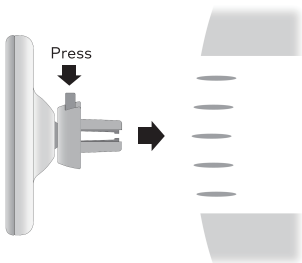

- 1** Press the clamp button hard and clamp onto the vehicle's AC vent. Then release the button.
-




- 2** Insert the car USB adapter into your vehicle's 12-24volt power outlet.

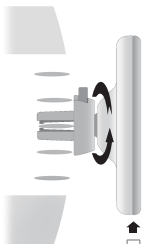

3


Adjust the Omnia to the proper angle for the driver.

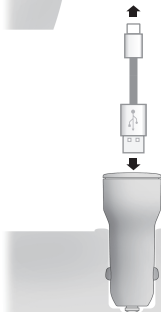


4

Connect the USB-C cable to Omnia's input port and the other end to the USB port.

- 5** Remove film from nano-suction area.

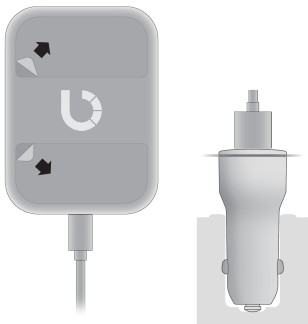

- 6** When vehicle's ignition begins, the LED indicator on the Omnia should light up. Then, it is ready to charge your phone.

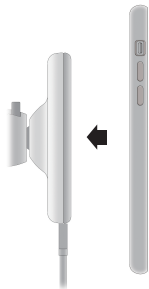

7

Place your phone onto the Omnia. The Omnia will firmly hold up your phone.

* The back of the phone or case must be a glossy surface for nano-suction attachment.

* Use BEZALEL Magnetic Case to automatically align and for better holding a proper charge.



8

Drive freely and safely.

SAFETY & HANDLING INSTRUCTIONS

1.



**DO NOT ALLOW HEAT TO BE
DIRECTED TO THE OMNIA CHARGER.**

This can damage the device. When turning on the car heater, do not let heat direct out of the vent to which the Omnia is attached. Direct heat completely away from the Omnia. Direct heat to the lower vents and completely away from where the Omnia charger is placed.



2.



**DO NOT USE THE DEVICE IN
OFF-ROAD ACTIVITIES.**



3.

Do not store the device in high-temperature environments, such as places of intense sunlight or other forms of heat. Do not place the device near fire or in excessively hot environments.

4.

Do not disassemble the device or attempt to re-purpose or modify it in any manner.

5.

Do not attempt to power this device using any method, apparatus, or connection other than the device's Type C connector.

6.

If Purchaser intends for this device to be used by a minor, purchasing adult agrees to provide detailed instructions and warnings to any minor prior to use. Failure to do so is the sole responsibility of Purchaser, who agrees to indemnify Manufacturer for any unintended use/misuse by a minor.

7.

All devices have gone through a thorough quality assurance inspection. If you find that your device is excessively hot, emitting odor, deformed, abraded or cut, or is experiencing or demonstrating abnormal phenomenon, immediately stop all devices use and contact Manufacturer.

CLEANING GUIDE

If your NanoGrip sticky mat becomes dirty or dusty, it will lose some of its stickiness.

Gently rub the nano-suction area with your finger with lukewarm water and air dry. This will make it regain stickiness and can be used over and over again.

PACKAGE CONTENTS

Omnia Wireless Car Charger
12V-24V Car USB Adapter
USB-C Cable
User Guide

SPECIFICATIONS

Wireless Charging Input	5V / 1.5A
Wireless Charging Output	5V / 1A
Car USB Adapter Input	12V -24V
Car USB Adapter Output	Self-adaptation 5V/3A (Max in total)
Charging Efficiency	≥ 73%